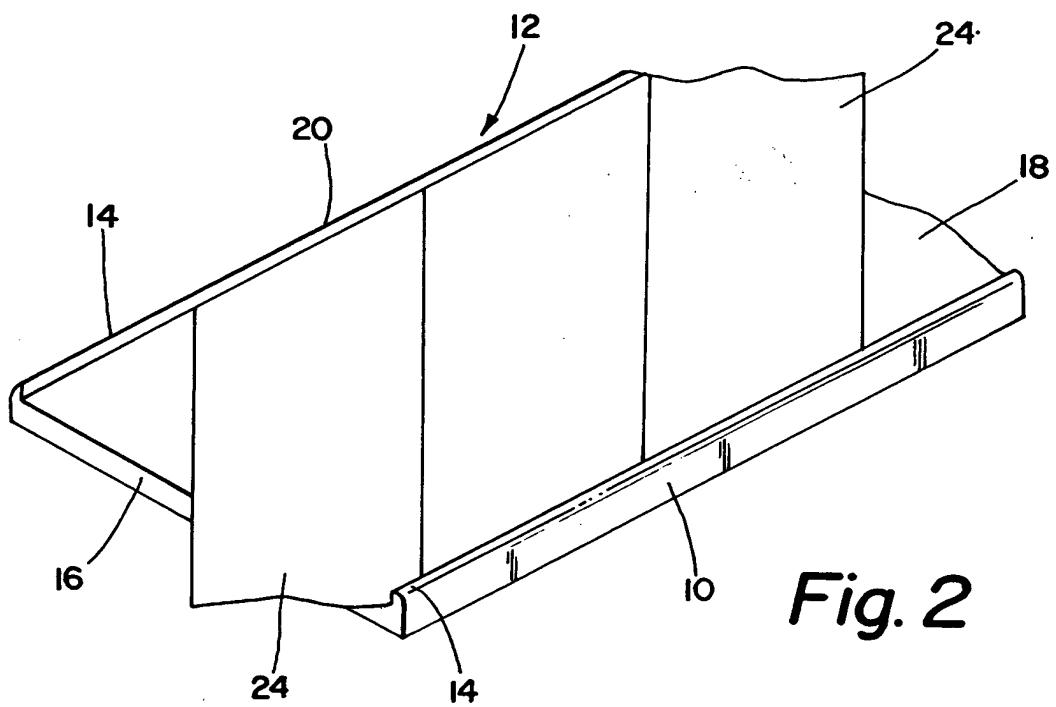
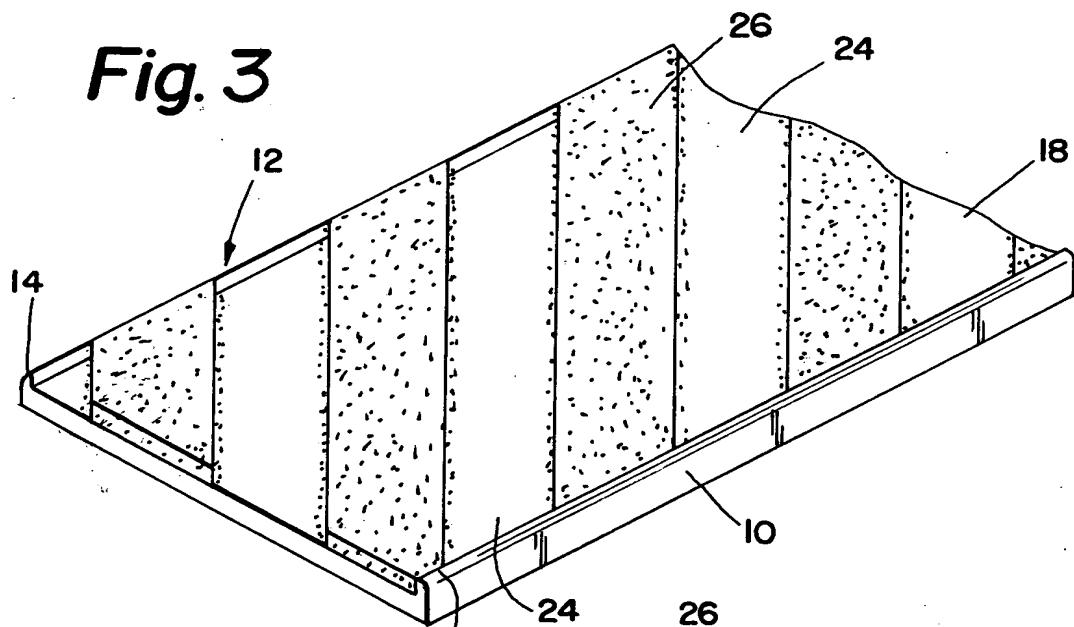


*Fig. 1*

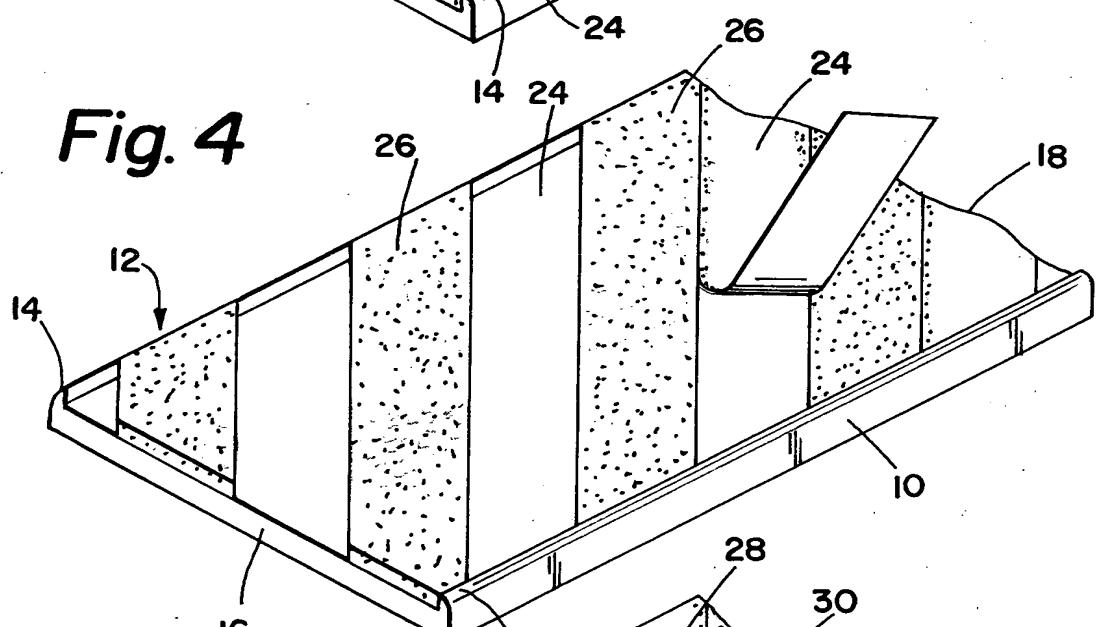


*Fig. 2*


*Fig. 3*






*Fig. 4*



*Fig. 5*

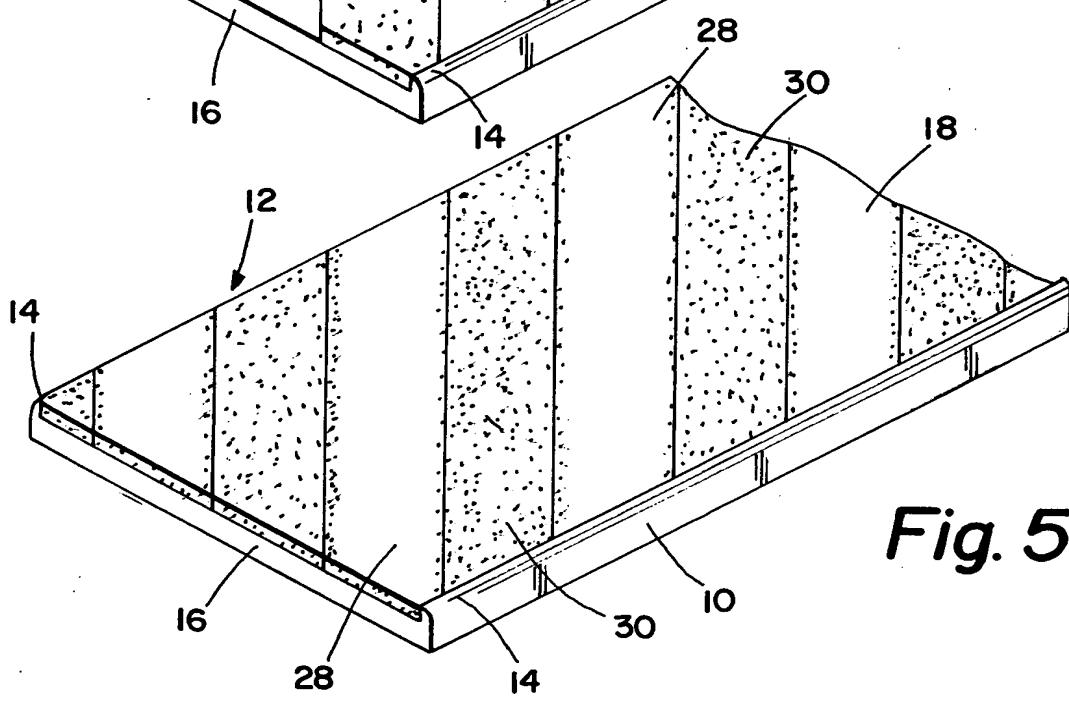

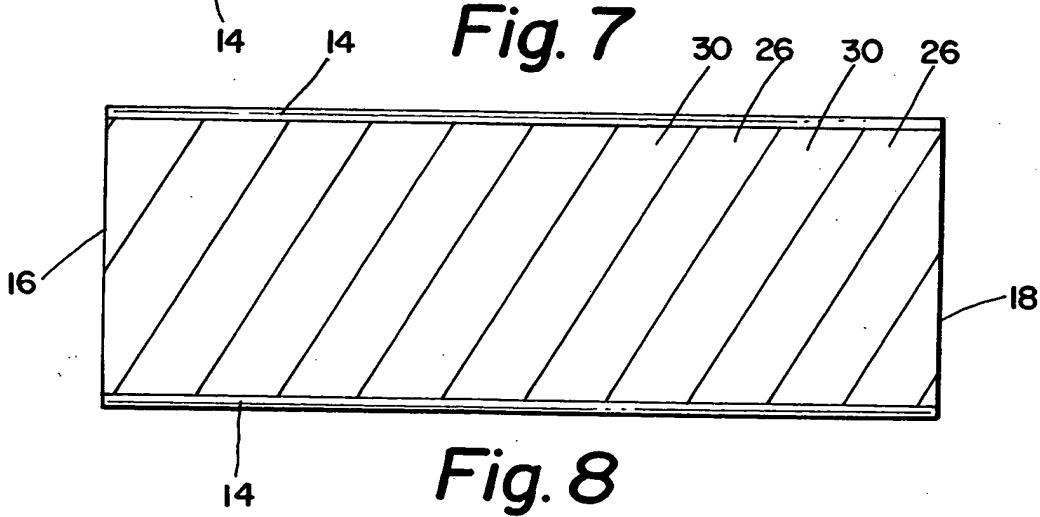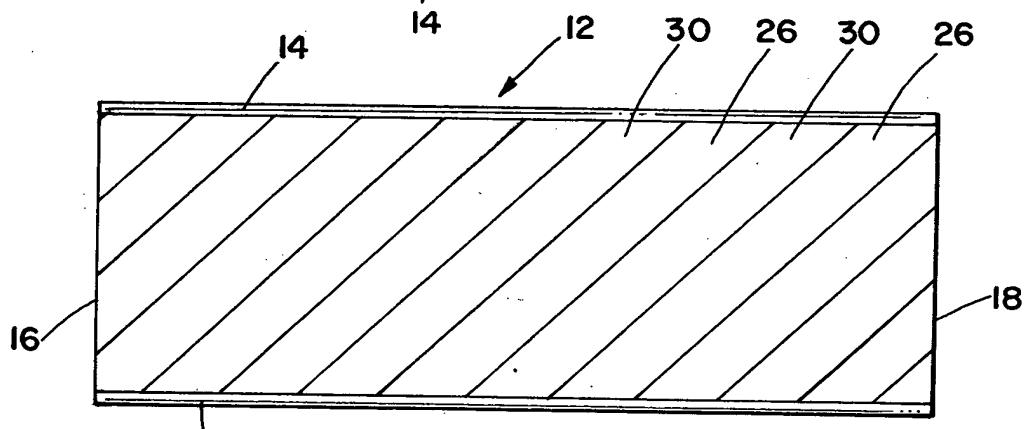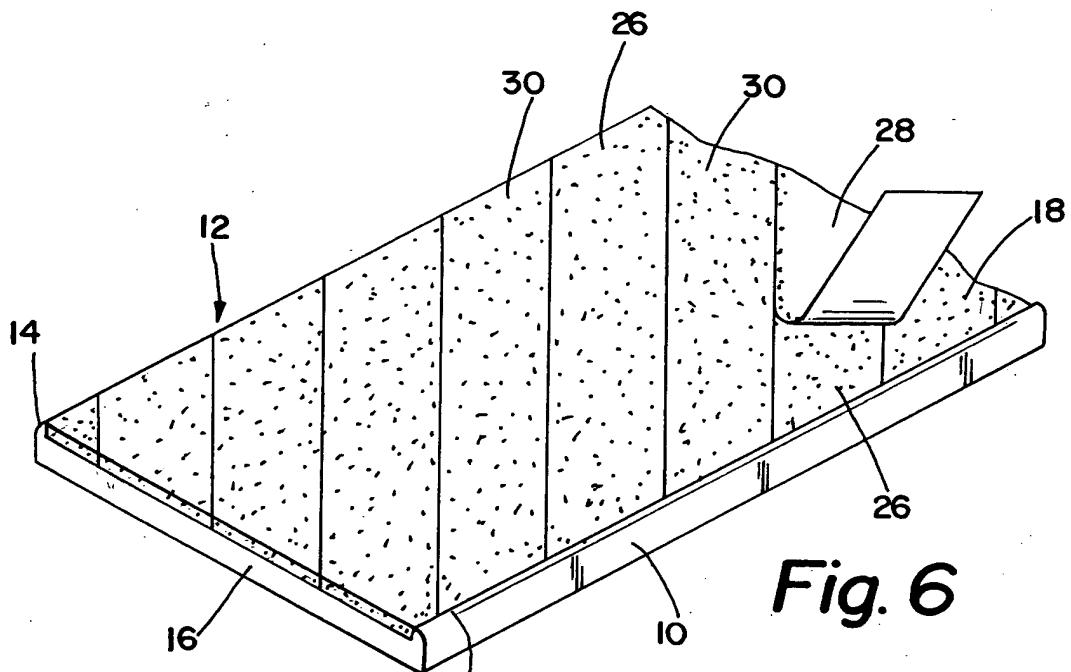

CUT TREAD TO LENGTH.

MARK OFF LINES AT DESIRED ANGLE,  
E.G., 45°, 60°, ETC., FROM TOP RIGHT  
CORNER DOWN LEFT IN DESIRED  
INCREMENTS, E.G., 3", 4", ETC.

FILL IN EVERY OTHER SPACE  
WITH MASKING TAPE STARTING  
WITH FIRST AREA TO LEFT OF  
UPPER R/H CORNER.

FILL UNTAPED AREAS WITH  
YELLOW RESIN. THEN REMOVE TAPE.

AFTER 12 HRS. (MINIMUM), TAPE  
OVER YELLOW RESIN.

FILL VOIDS WITH BLACK RESIN.  
THEN REMOVE TAPE FROM YELLOW RESIN  
AND LET SET 12 HRS. (MINIMUM).

*Fig. 9*